

TO INFLATE WITH FOOT


STEP 1 - Level the mattress on flat surface



STEP 2 - Ensure that both parts of the back nozzle are fully & tightly closed.



STEP 3 - Remove the cap and rubber plug from the front nozzle (Foot pump). Completely cover the front nozzle with your foot and begin pumping until the pad reaches a satisfactory level of firmness.

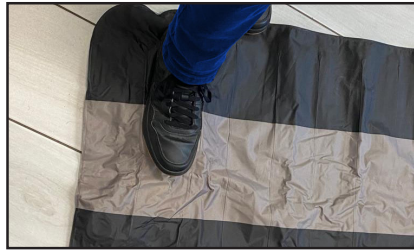

STEP 4 - Once fully inflated, close the nozzle using the cap and rubber cap to prevent any air loss.



TO INFLATE BY MOUTH/PUMP


Step 1 - Make sure the rubber plug and cap from the Foot pump are securely closed.



Step 2 - Flip the mattress to the back and open the clear lid cover. Either blow air with the black cap (check valve) on, or use a pump. Continue inflating until the pad reaches the desired level of firmness.




Step 3 - Once inflated, cover the black check valve with the clear lid cover.

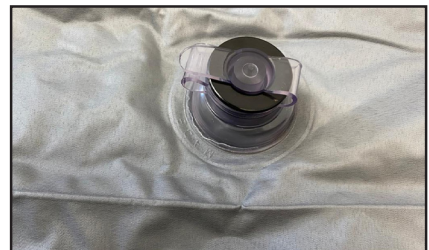

TO DEFLATE

STEP 1 - Open the nozzle fully on the back side of the mattress.

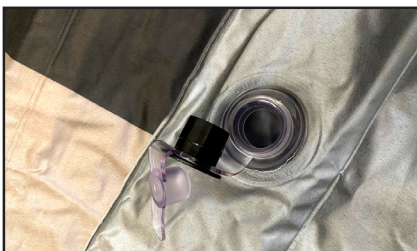

STEP 2 - Kneel on mattress to release the air



STEP 3 - Roll up the mattress and close the nozzle.



- Be careful not to over-inflate the mattress
- Keep away from fire and high temperature goods
- Refrain from allowing pets near to prevent holes or punctures.

We hope you enjoy the comfort of your inflatable mattress on your adventures. If you have any questions or concerns, please don't hesitate to contact us at any time. We're here to assist you. Reach us via email at help@brexc.com.